

LCD Metal Case Alarm Watch with Backlight

OWNER'S MANUAL — Please read before using this equipment.

Your LCD Metal Case Alarm Watch is a precision timepiece that combines advanced electronic technology with fashionable design.


Before using the watch, remove the protective film from the display.

Water Resistant — Submerge the watch to a maximum of 100 feet (30 meters). Not recommended for use while deep sea diving or platform diving.

Daily Alarm and Hourly Chime — Set the watch to sound an alarm every day at a preset time, and a chime on the hour.

Stopwatch — Time events from start to finish for up to 24 hours. You can also record split times.

Snooze Timer — Temporarily silences the alarm so it sounds again after five minutes.

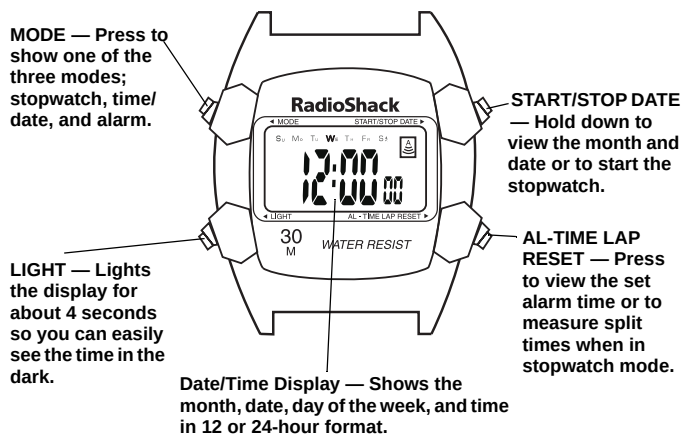

SETTING THE TIME AND DATE

Note: When setting the time, set the seconds to **00** by pressing **START/STOP DATE**. If the seconds are greater than **29** when you press **START/STOP**, the minute digits advance by one.

1. From the time display, press **MODE** three times. The seconds and the dash above **TU** flash.
2. Press **AL-TIME LAP RESET**. The minutes digits flash.
3. Repeatedly press or hold down **START/STOP DATE** until the desired minutes appear.
4. Press **AL-TIME LAP RESET**. The hours digit(s) flash.
5. Repeatedly press or hold down **START/STOP DATE** until the desired hour appears.
6. To choose between 12 and 24-hour formats, repeatedly press **START/STOP DATE** to advance the hour digit until the desired format appears.

In the 12-hour format, **AM** or **PM** appears. If you are setting time based on a 12-hour format, **A** or **P** appears next to the minutes when you set the time.

In the 24-hour format, the hours appear from **0** to **23**. If you are setting time based on a 24-hour format, **H** appears next to the minutes when you set the time.

7. Press **AL-TIME LAP RESET**. **DATE** and the date appears with the day digits flashing.
8. Repeatedly press or hold down **START/STOP DATE** until the correct day of the month appears.
9. Press **AL-TIME LAP RESET**. The month digits flash.
10. Repeatedly press or hold down **START/STOP DATE** until the correct month appears.
11. Press **AL-TIME LAP RESET**. The dash above the current day of the week flashes.
12. Repeatedly press or hold down **START/STOP DATE** until the correct day of the week appears.
13. Press **MODE** to return to the time display.

Notes:

- From time display, hold down **START/STOP DATE** to review the date. Release it to return the time display.
- You must manually set the date to February 29 in a leap year.
- If you need to set the date back a month, you must first set the month to the desired month, then set the date. For example, if the calendar setting is now April 1 and you want to set it back to March 31, you must first set the month to 3 (March), repeatedly press **AL-TIME LAP RESET** until the day digits flash, then set the date to 31. You cannot set the date to 31 when the month is 4 (April) because there are only 30 days in April.

SETTING THE ALARM TIME

The daily alarm sounds for one minute at the preset alarm time.

1. From the time display, press **MODE** twice. The hour digits and the dash above **MO** flash.
2. Repeatedly press or hold down **START/STOP DATE** until the desired hour digits appear.
3. Press **AL-TIME LAP RESET**. The minute digits flash.
4. Repeatedly press or hold down **START/STOP DATE** until the desired minutes digits appear.
5. Press **MODE** to store the alarm setting and return to the time display.  appears when the alarm is set.
6. To view the alarm time from time display, hold down **AL-TIME LAP RESET**. Release it to return to the time display.

TURNING THE ALARM ON AND OFF

From the time display, hold down **START/STOP DATE** and **AL-TIME LAP RESET** at the same time. The watch beeps and the alarm time appears. Release **START/STOP DATE** and **AL-TIME LAP RESET** to return to the time display.

At the preset alarm time, the watch beeps for about one minute. To silence the alarm sooner, press **AL-TIME LAP RESET**.

Note: The snooze feature allows you to silence the alarm temporarily. When the alarm sounds, press **START/STOP DATE**. The alarm is silenced and sounds again after five minutes.

TURNING THE CHIME ON/OFF

An hourly chime can be set to automatically sound at the beginning of each hour.

From the time display, hold down **AL-TIME LAP RESET** and press **MODE**. The alarm time and seven dashes appear above the days (indicating the chime sounds at every hour every day). Release **MODE** and **AL-TIME LAP RESET** to return to the time display.

To turn the chime off (from the time display), hold down **AL-TIME LAP RESET**, then press **MODE**. The alarm time appears while the seven dashes disappear.

USING THE STOPWATCH

The stopwatch (chronograph) counts elapsed time in minutes and seconds up to 24 hours. For the first 30 minutes, it also shows hundredths of a second. At 24 hours, the stopwatch begins counting from **0 00 00** again. The stopwatch continues until you turn it off.

1. From the time display, press **MODE**. The dashes above **SU**, **FR**, and **SA** flash.
2. If the display does not show **0:00 00**, press **AL-TIME LAP RESET** to reset the stopwatch. To start the stopwatch, press **START/STOP DATE**. The dash above **SU** and **SA** flash and the stopwatch starts.
3. To measure split time (the total elapsed time from the start time), press **AL-TIME LAP RESET** while the stopwatch is running. The stopwatch continues to run. (The **:** and the dashes above **SU**, **TH**, and **SA** flash to indicate the stopwatch is running.) Press **AL-TIME LAP RESET** again to view the total elapsed time.
4. Press **START/STOP DATE** to stop the stopwatch.

Note: You can use the split time function as many times as you want until you stop the stopwatch.

REPLACING THE BATTERY

Your watch comes with one V392/SR41 battery installed for power. For the best performance and longest life, we recommend RadioShack alkaline batteries. For battery replacement, take your watch to your local RadioShack store.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- When the watch stops working, take it to your local RadioShack store for battery replacement.

Warnings:

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

CARE

Use and store the watch only in normal temperature environments. Handle the watch carefully; do not drop it. Keep the watch away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the watch's internal components can cause a malfunction and might invalidate its warranty. If your watch is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Source	One V392/SR41 Button Cell Battery (supplied)
Battery Life	About 12 months
Clock Accuracy	+/- 0.67 sec per day
Operating Temperature	32-122°F (0-50°C)
Dimensions	1/2 x 1 3/4 x 1 inches (12 x 44 x 25 mm)
Weight	2.01 oz (57 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99